

Bosch side-by-side refrigerator error codes

 searspartsdirect.com/diy/error-codes/refrigerator-repair/1234589/bosch-side-by-side-refrigerator/1794

E01

Refrigerator
compartment
temperature
sensor is
defective



BOSCH

Check/Repair
Unplug the
refrigerator and
reconnect any
loose connections
on the wire

harness on the temperature sensor for the refrigerator compartment, which is in the upper right corner of the refrigerator. Replace the wire harness if damaged. If the wire harness connection is okay, replace the refrigerator compartment temperature sensor.

How-to help

[How to replace a refrigerator thermistor](#)

Possible parts

Refrigerator compartment temperature sensor, Wire harness

E02

Freezer compartment temperature sensor is defective

E03

Temperature-controlled drawer temperature sensor is defective

E15

Ambient temperature sensor is defective

E10

Main control board module is defective

E11

Display control module is defective

E20

Communication error between the main control board module and the display control module

E21

Communication error between display control module and the ice and water dispenser control module